

## Levelogger®


Model 3001

### Using Your Levelogger NPT Adaptor (#108549)

**Note:** The Levelogger NPT Adaptor is not recommended for pressures in excess of 30 psi. (66 ft. (20 m) of water column).

1. The compression fitting nut may have to be loosened before the Levelogger is inserted.
2. Slide the Levelogger into the Compression Fitting, leaving approximately 1/4" of Levelogger body exposed above the Compression Fitting.
3. Tighten the Nut 1-1/4 turns past finger tight for a proper seal.
4. Thread the 1/4" NPT Connector into a Female NPT connection until finger tight.

**Note:** To connect a Solinst Direct Read Cable and/or a Levelogger, simply unthread the Top Cap of the Levelogger and thread on the Connector Cable.

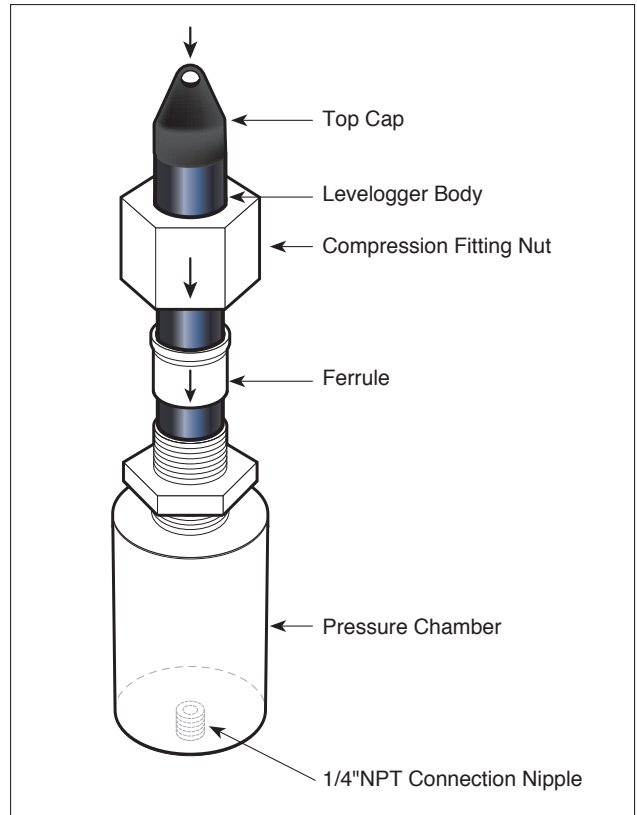

*NPT Adaptor with Levelogger Installed  
and Connection to Direct Read Cable*



*NPT Adaptor  
with Levelogger Installed*

®Solinst is a registered trademark of Solinst Canada Ltd.

Printed in Canada  
July 25, 2011  
(#108550)

**For further information contact: Solinst Canada Ltd.**  
Fax: +1 (905) 873-1992; (800) 516-9081 Tel: +1 (905) 873-2255; (800) 661-2023  
35 Todd Road, Georgetown, Ontario Canada L7G 4R8  
Web Site: [www.solinst.com](http://www.solinst.com) E-mail: [instruments@solinst.com](mailto:instruments@solinst.com)

# Solinst®